
MERLYN




Installation Guide Pivot door

Left hand

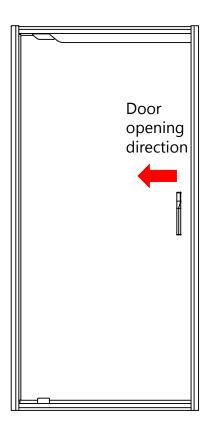

Right hand

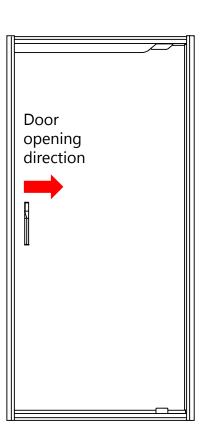

IMPORTANT: Please read the complete instructions before commencing fitting.


Make sure the tray is 100% level in all directions. Do Not attempt to install the product unless you can tick all 4 boxes satisfactory.

· Check that you have the tools required \square
· Check the installation site is compatible with the sizes
of door supplied \square
· Check all the enclosure components are present
· Check the installation kit is complete

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type.

It may also be necessary to consult your tiling supplier about the correct method for drilling tiles.

ATTENTION: TAKE EXTREME CARE WHEN HANDLING GLASS, WEAR PROTECTIVE EYEWEAR AND CLOTHING. DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR IMPACTS DURING THE INSTALLATION.

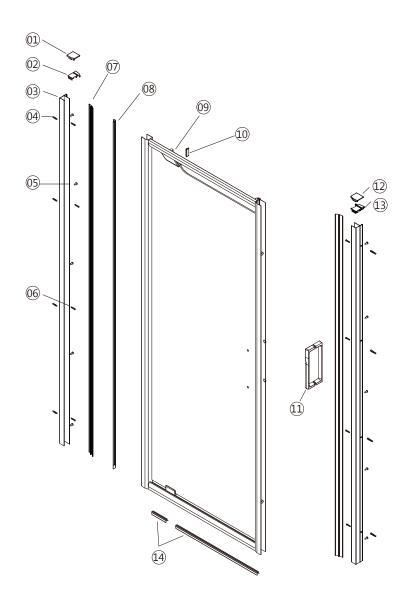

No.	QTY	Description	Code	No.	QTY	Description	Code	
01)	1	Top cap for adjusting profile, left	A6UPPCAPL	08	1	Infold/Pivot Infold upright seal	A6NFPVHSS	
02	1	Top cap for wall profile, left	A6WPCAPL	09	1	Pivot Door		
03	2	Wall profile	A6STDWP	10	2	Pivot pin cover cap	A6PVCAP	
04	8	Wall plug	A6WPLUG	11)	1	Handle	A6HANDLE	
05	10	Frame fixing screw	A64X8FRA	12	1	Top cap for adjusting profile, right	A6UPPCAPR	
06	8	pan head wall screw	A6WSCRW	13	1	Top cap for wall profile, right	A6WPCAPR	
07)	2	Cover strip	A6STDCS	14)	1	Pivot door bottom water seal	A6PVBOTS	

Fixing Kit Components



A64X8FRA ST4*8 x10



A6WSCRW ST4*30 x8



A6WPLUG Ø6 x8



A6UPPCAPL

x1



A6UPPCAPR

x1


DESDACE



AR6SPACER1 AR6SPACER2 1&1.5mm 2&3mm x1 x1





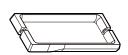









A6WPCAPL x1

A6WPCAPR

A6HANDLE

x1

2.5mm x1


2mm x1

Ø3

A6PVCAP

x1 x2


Tools required

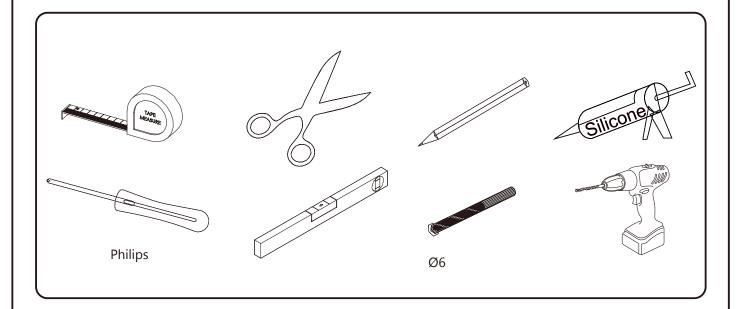

1


Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. Do not angle out bottom tile.


TRAY MUST BE LEVEL IN ALL DIRECTIONS!
TRAY MUST BE SEALED FULLY IN ALL AREAS WHERE THE TRAY MEETS THE WALL.

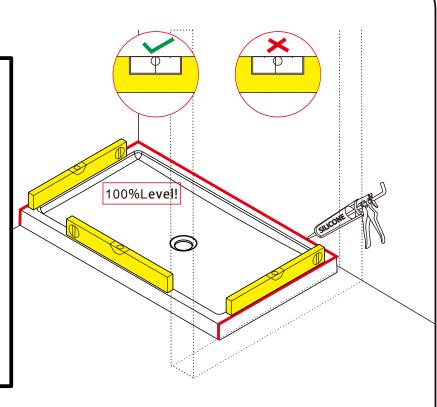



Note: This is a Reversible product but is shown in left hand configuration for illustration purposes.


Size	X
700	640-690
760	700-750
800	740-790
900	840-890
1000	940-990

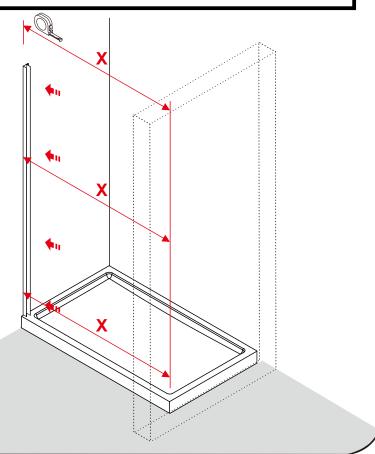

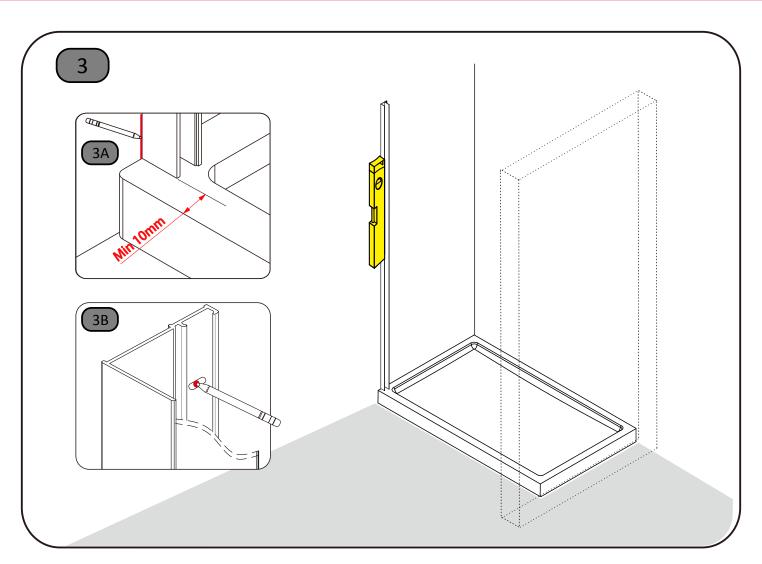

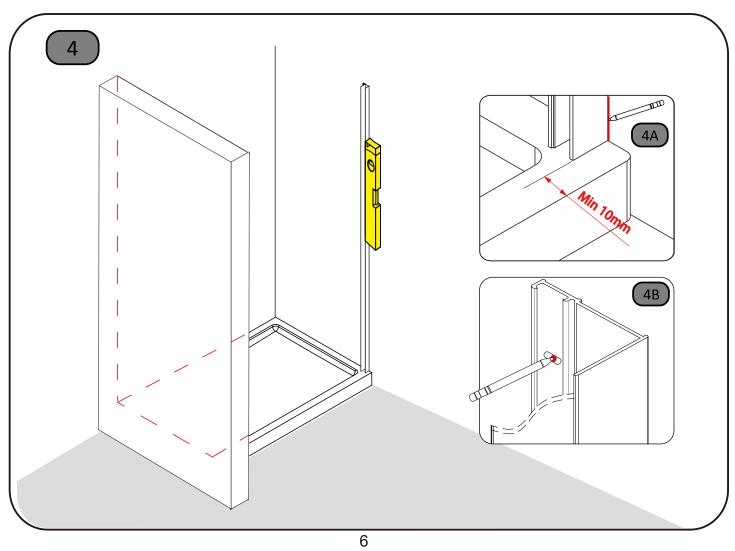

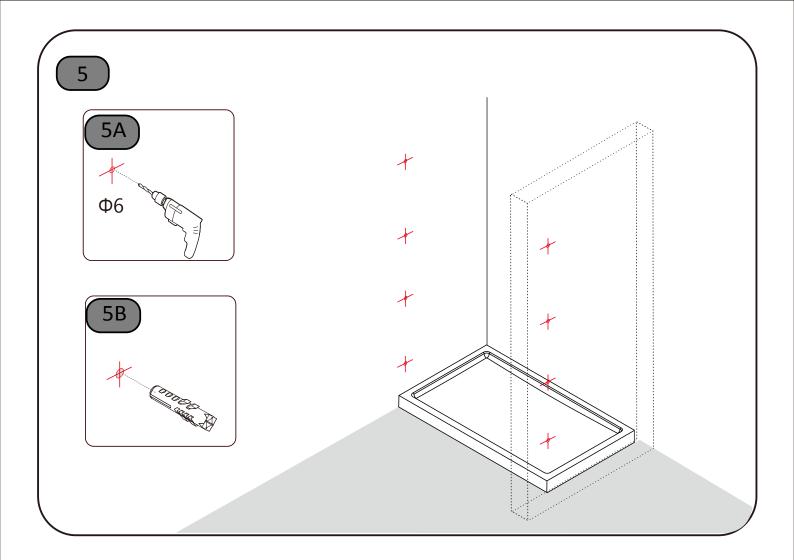


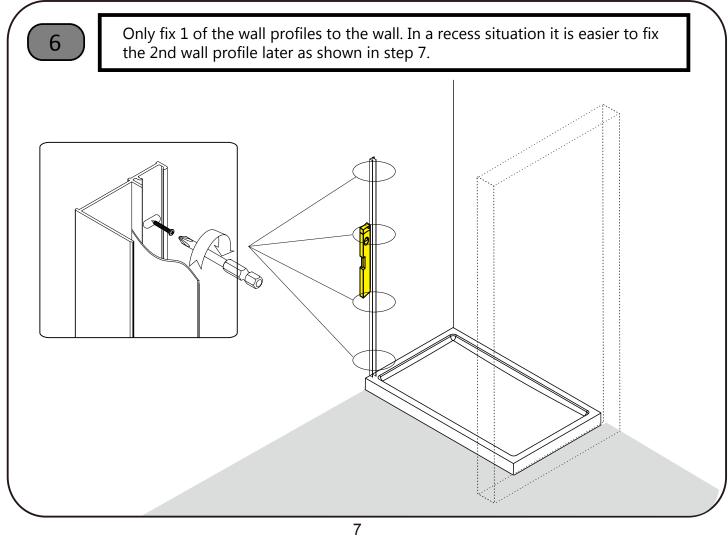






7A & 7B Slot the 2nd wall profile onto the upright of the enclosure ready to be fixed when in position.

7C Slot the enclosure into the wall profile

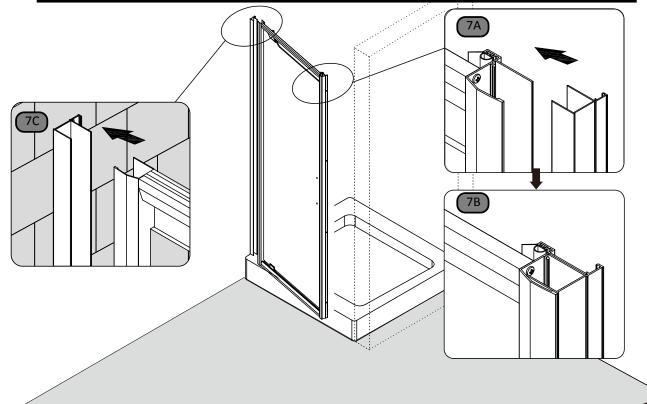

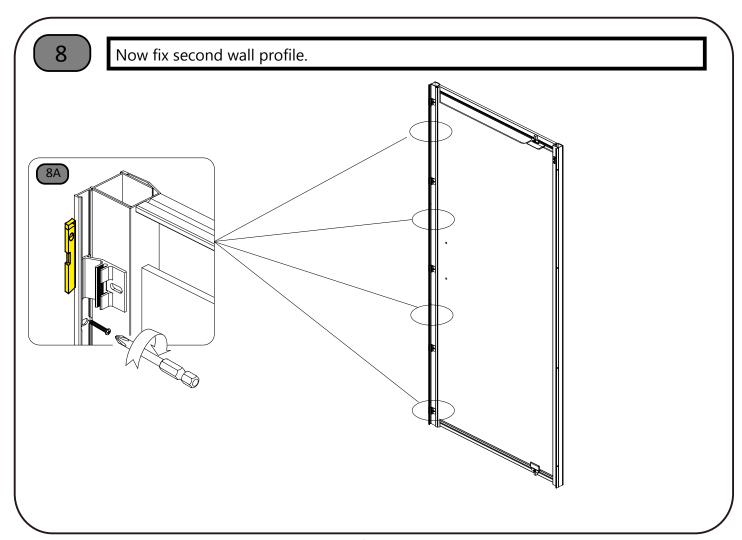


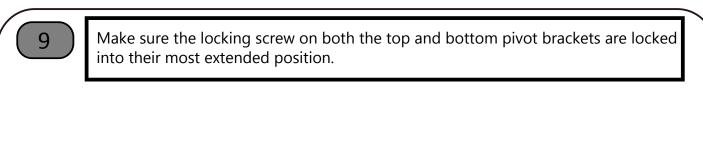


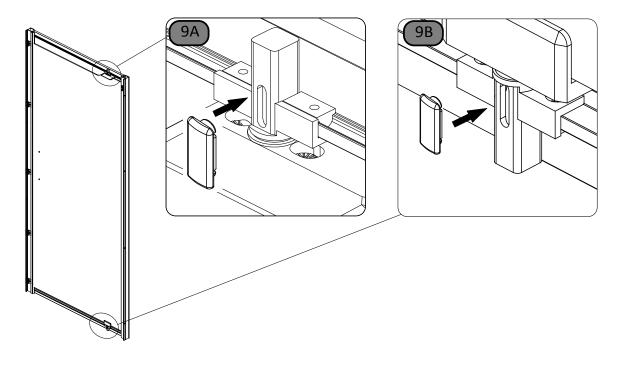






loosen the grub screw on the top bracket using the hex key. While the hex key is still inserted lift up the pivot pin to the highest point then tighten. Repeat this step with the bottom bracket. The moving panel can then be removed.

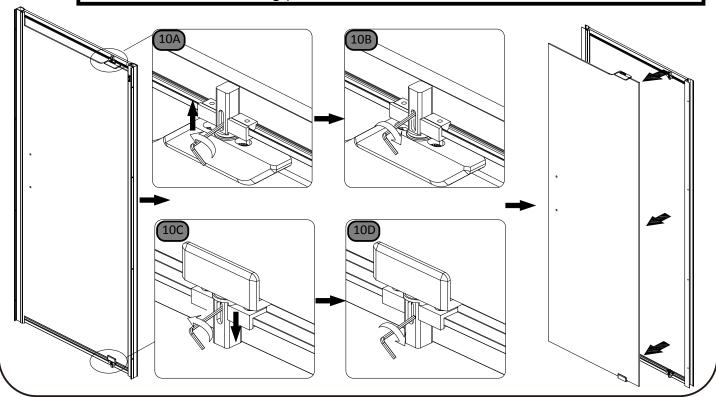


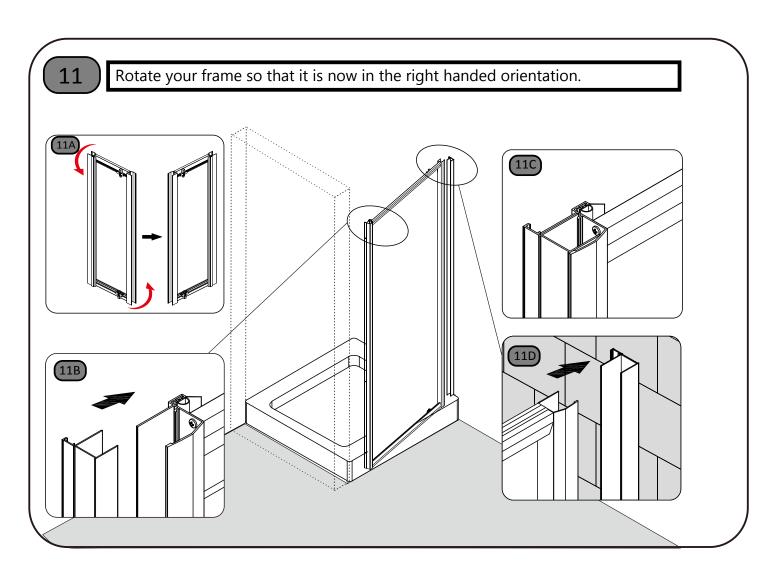


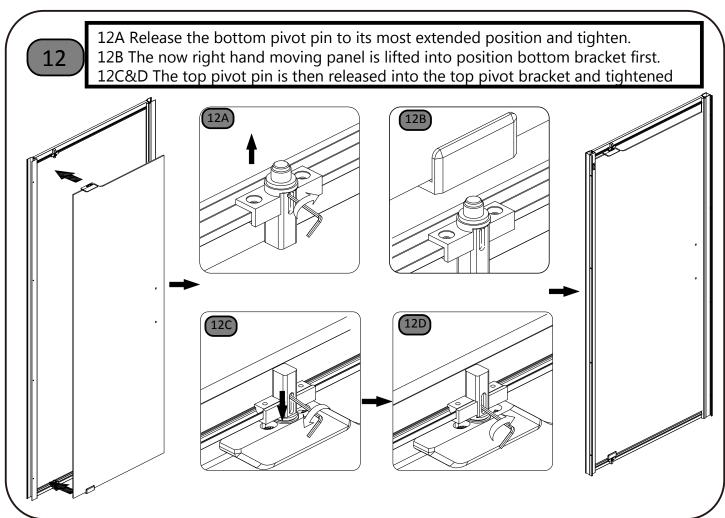


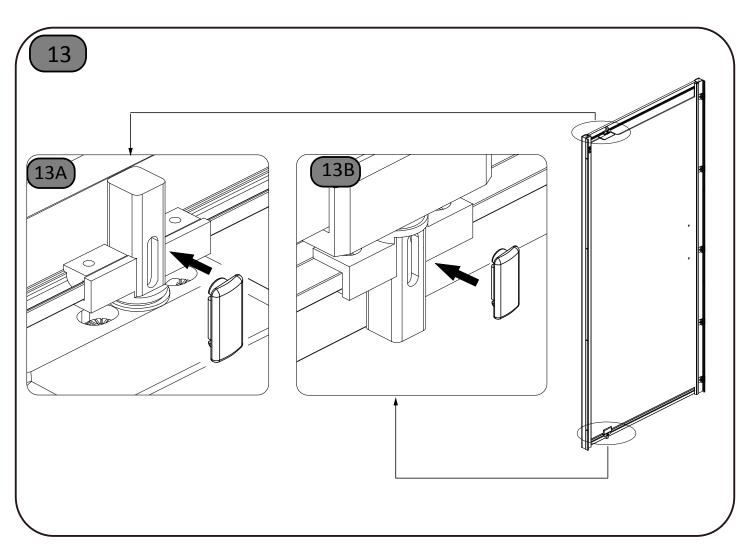


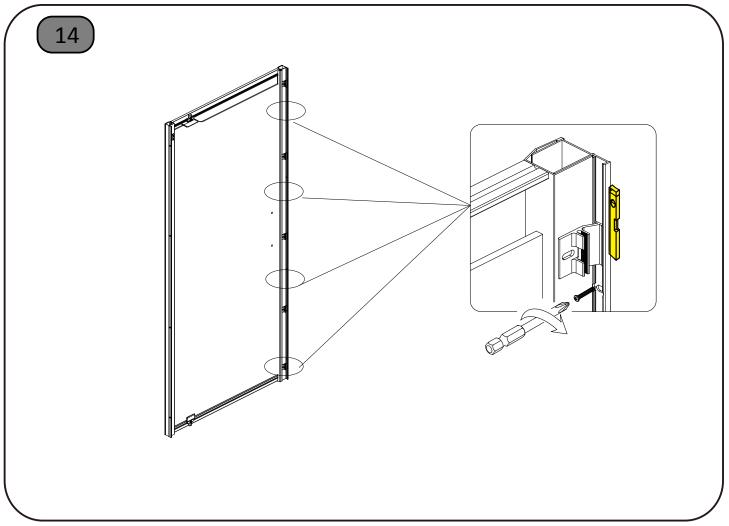


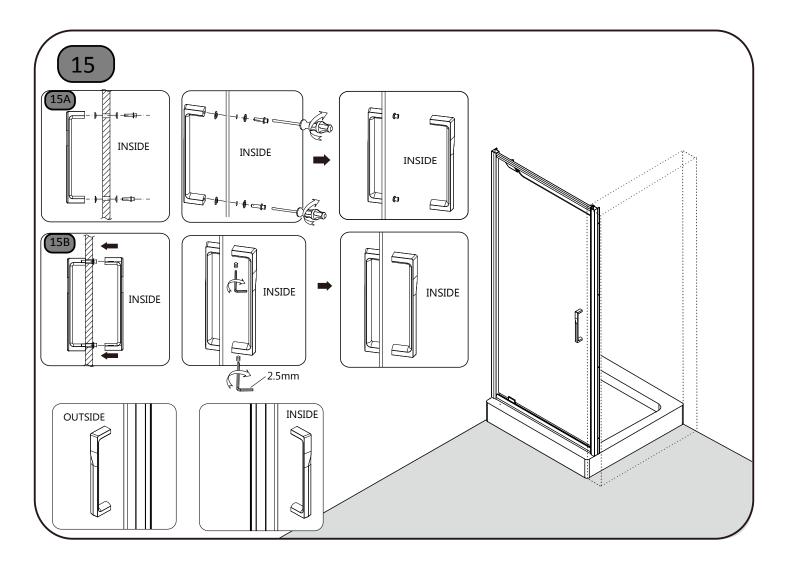


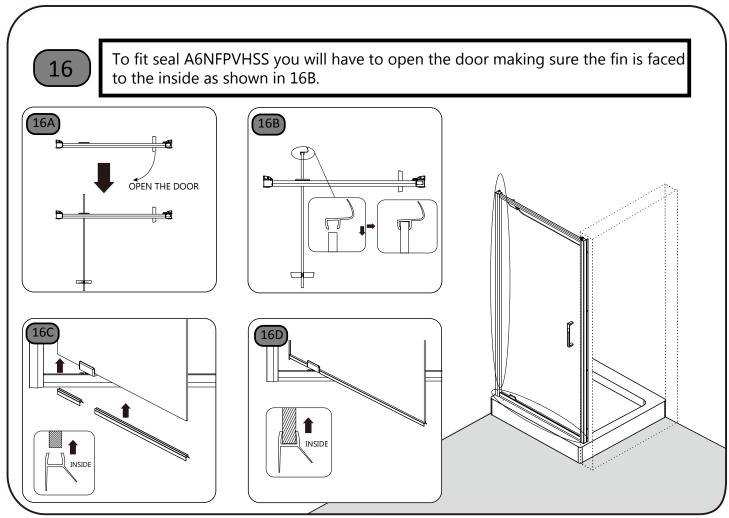


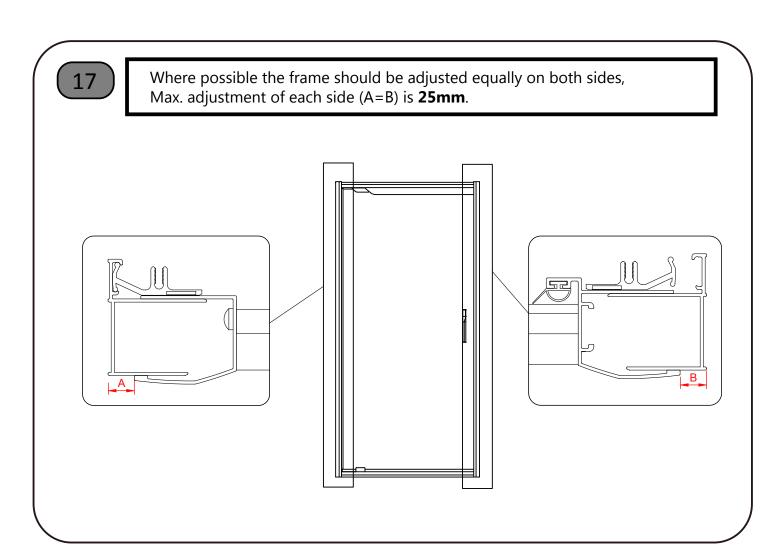


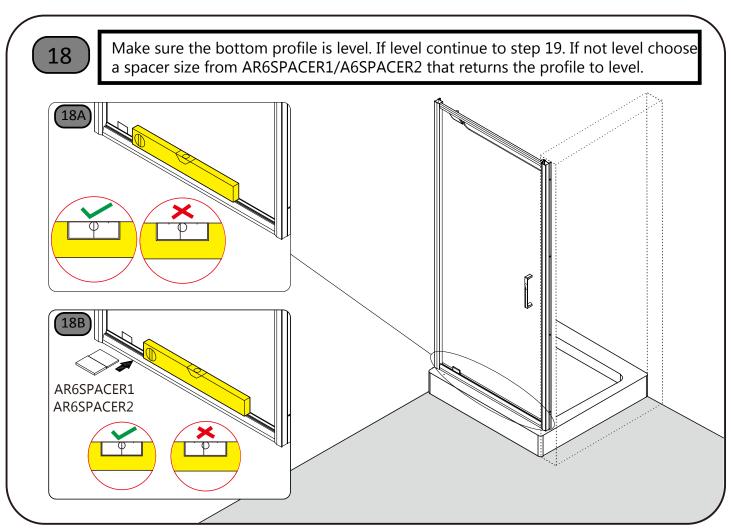

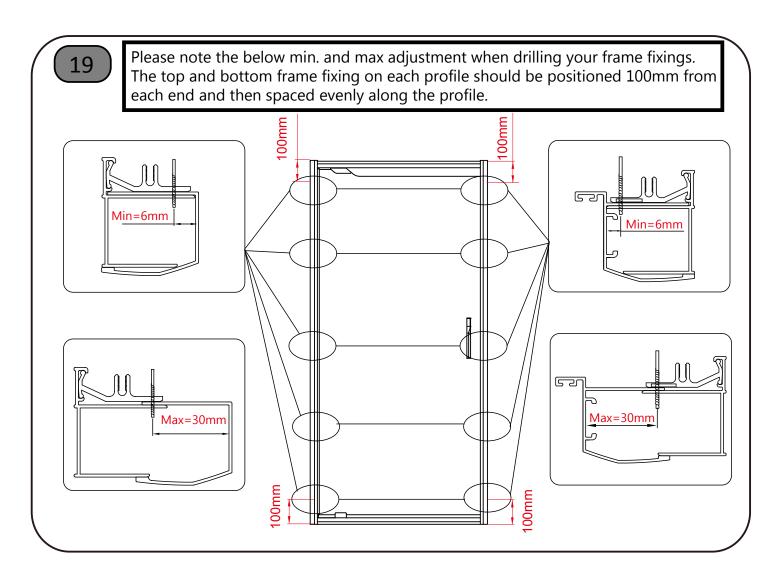

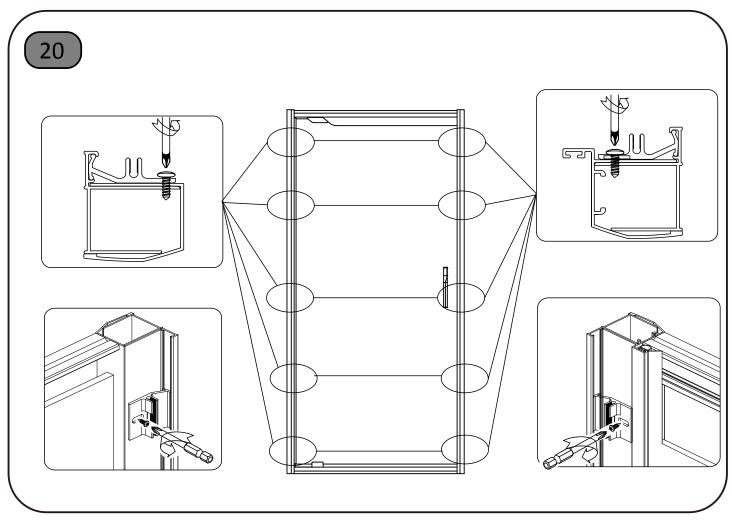

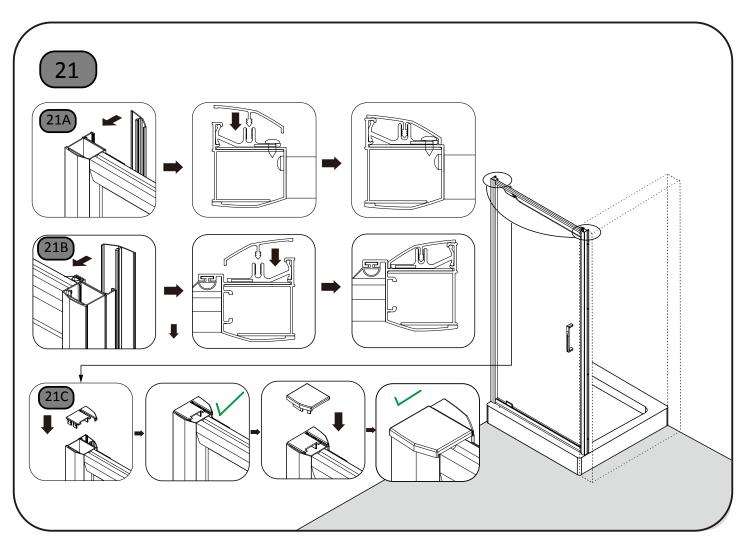

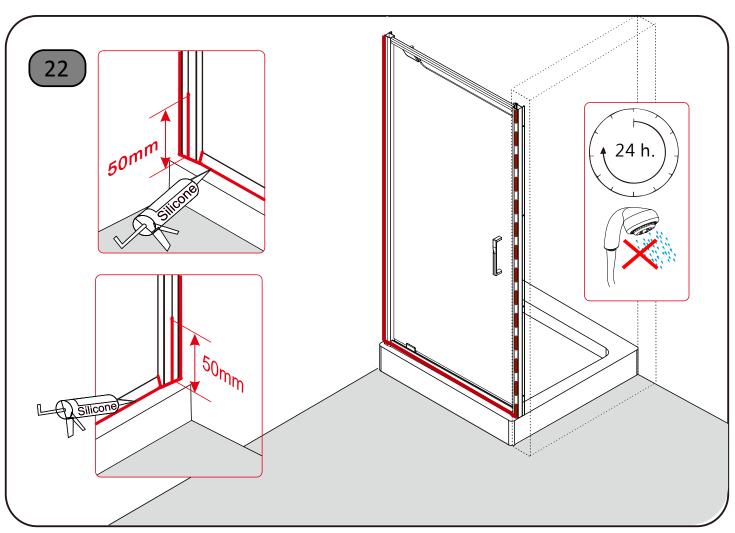

CLEANING

It is important to clean your Merlyn shower door after every use. Wipe down all the glass and metal parts with a soft cloth. Do not allow lime scale to build up in hard water areas. Ensure that any residual water on the glass is removed after every use.

- · Clean the glass regularly using soapy water.
- · Do not use abrasive products on any surfaces.

Chrome is vulnerable to acid attack and some strong household cleaners including strong disinfectants, denture cleaners, hair dyes, wine making chemicals and photographic chemicals may contain acid. These materials may have a varying effect on the surface from black spots/streaks (which cannot be removed) to pitting the surface. Contact with these materials should be avoided.

TROUBLE SHOOTING

Door Not Aligning

- 1. Is the tray 100% level? (see page 5)
- 2. Have the walls been checked at different levels to ensure consistency? Bumps or hollows in the wall may push the frame out of alignment.
- 3. Are the wall profiles stepped in a Min. 10mm from the edge of the tray? (see page 6)
- 4. Do the finished tile measurements at top, middle and bottom fall within the adjustment (X) listed on step 2.

Door Leaking

- 1. Is the door sealed correctly? (see step 22)
- 2. Check to ensure the door frame is 100% square.



To download the Declaration of Performance (DOP) for this product use the link below. http://merlynshowering.com/aftersales-support/dop-certs/ For further information contact IRL: 056 7791 888, UK: 0808 1011 429