
## MERLYN

## **BIFOLD DOOR**

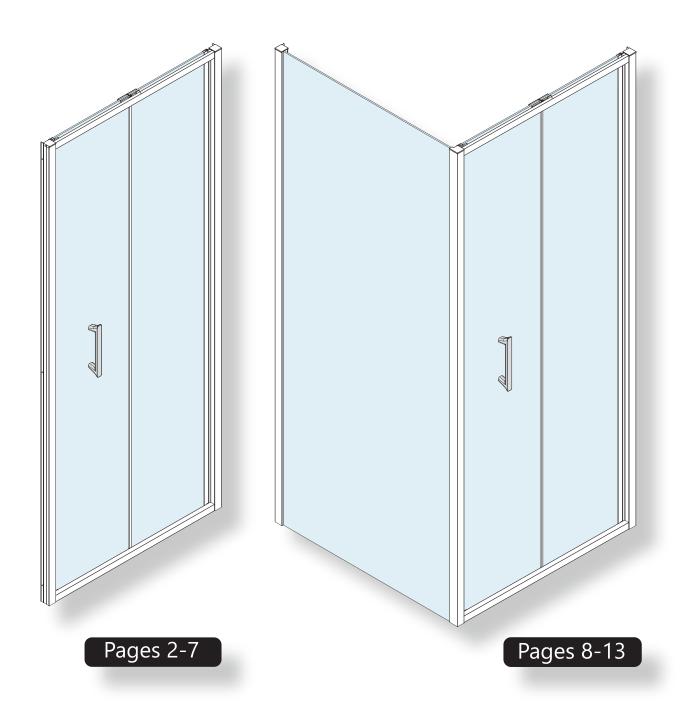

## **INSTALLATION GUIDE**

### **IMPORTANT:**


# Please read the complete instructions before commencing fitting.

Make sure the tray is 100% level in all directions. Do Not attempt to install the product unless you can tick all 4 boxes satisfactorily.


•	Check that you have the tools required	
•	Check the installation site is compatible with	
	the sizes of door supplied	
•	Check all the enclosure components are present	
	Check the installation kit is complete	


The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type. It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.


ATTENTION: TAKE EXTREME CARE WHEN HANDLING GLASS, WEAR PROTECTIVE EYEWEAR AND CLOTHING. DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR IMPACTS DURING THE INSTALLATION.

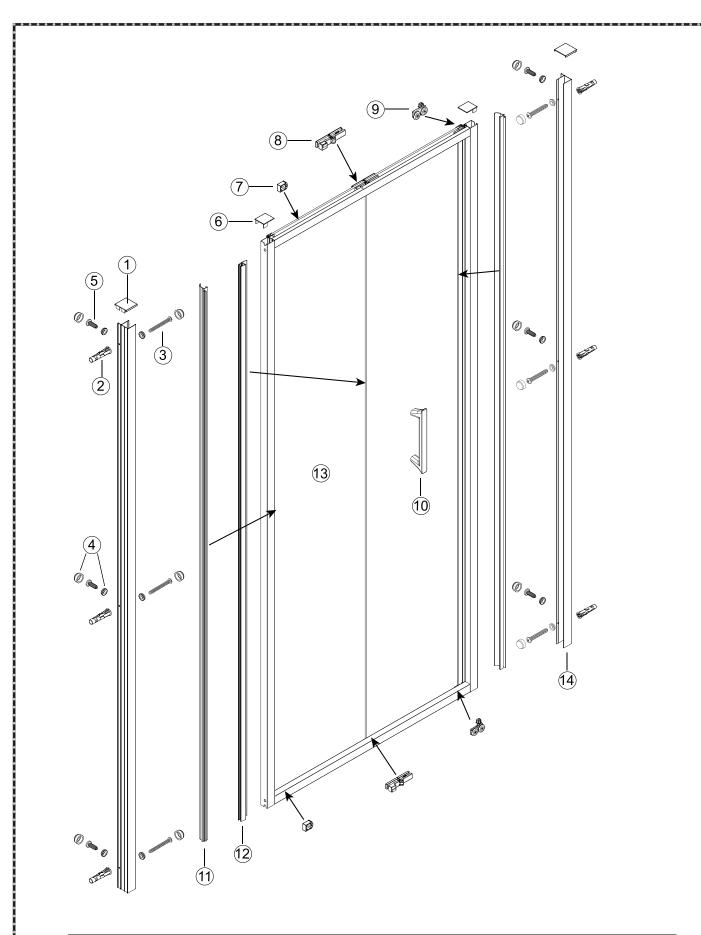



No.	QTY	descriptions	Part number	No.	QTY	descriptions	Part number	No.	QTY	descriptions	Part number
1	1	Wall profile cover cap	SP0SS6026	6	2	Frame cover cap	SP0SS6027	11	2	Frame upright seal	SP0SS6019
2	6	Wall plug	A03S0090	7	2	Bifold bump stop	SP0SS6037	12	1	Middle upright seal	SP0SS6020
3	6	4x30 screw	A03S0089	8	1	Hinge set	SP0SS6042	13	1	Bifold Door	Α
4	12	Screw cover cap & clip	SP0SS6028	9	1	Bifold roller set	SP0SS6041	14)	2	Wall profile	SP0SS6003
(5)	6	4x10 screw	SP0V4110	10	1	Handle	SP0SS6029				

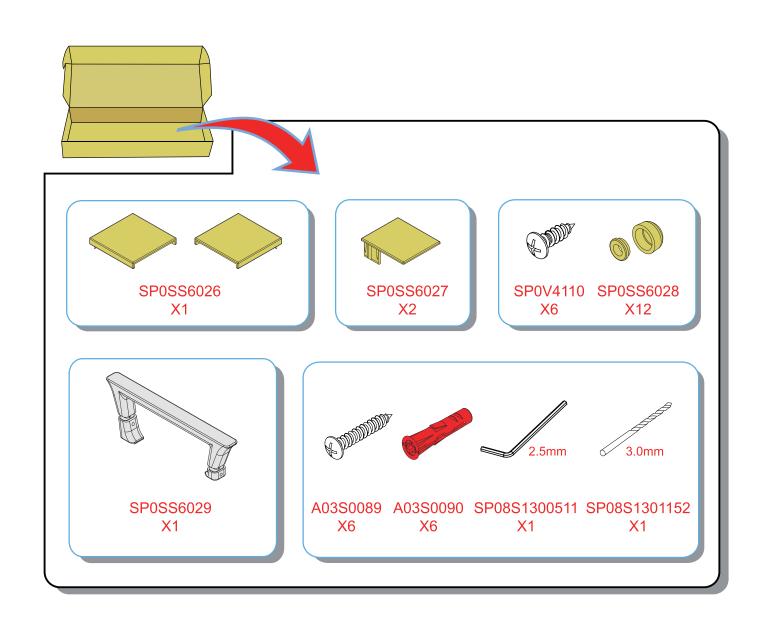


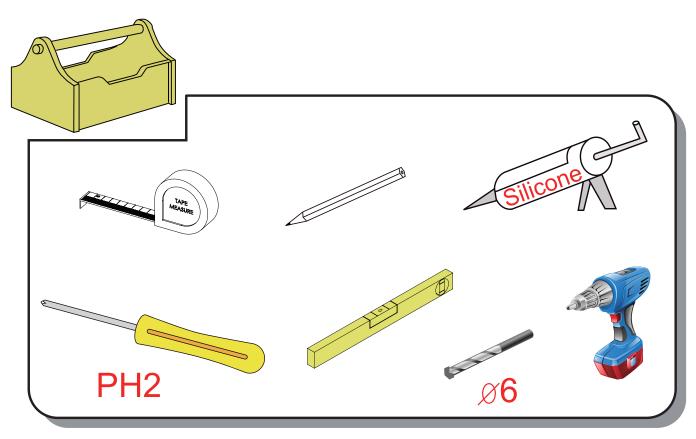


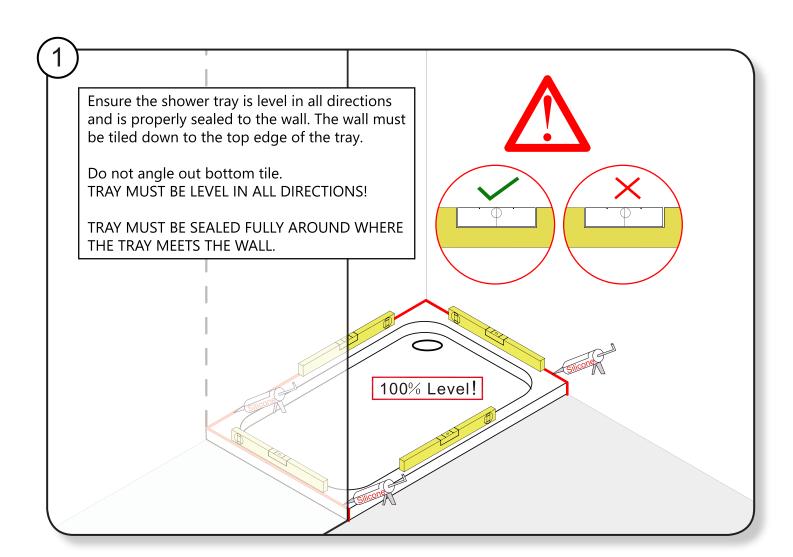


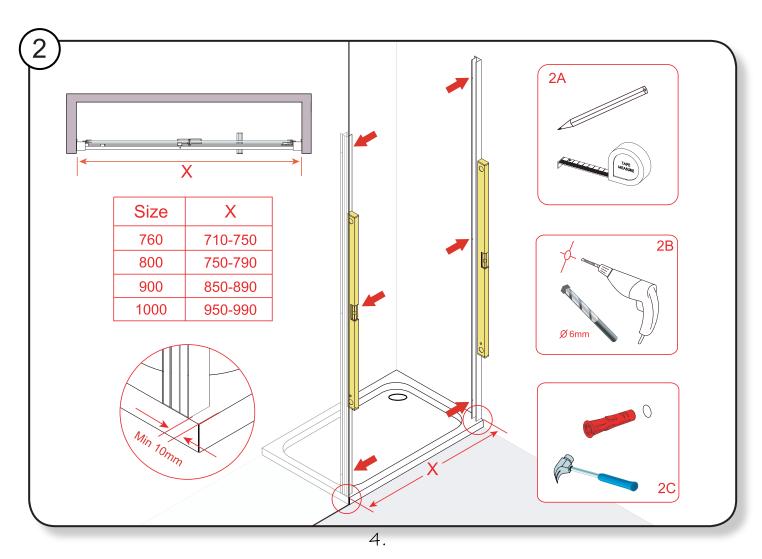


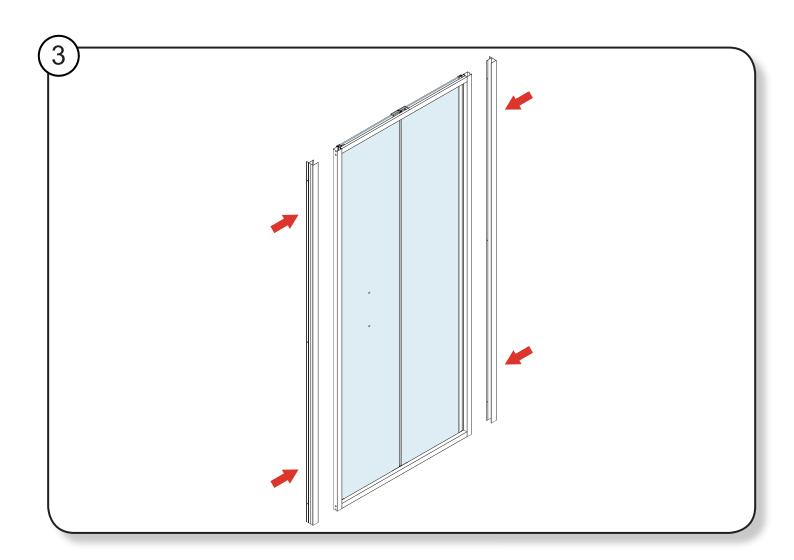


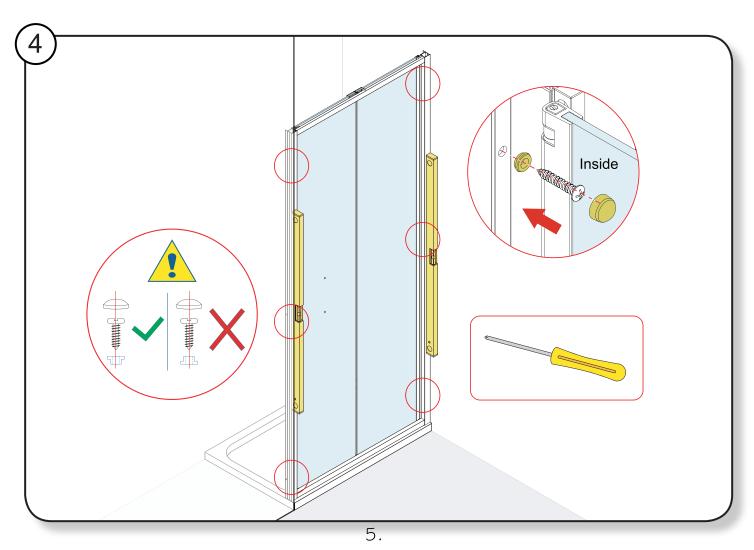

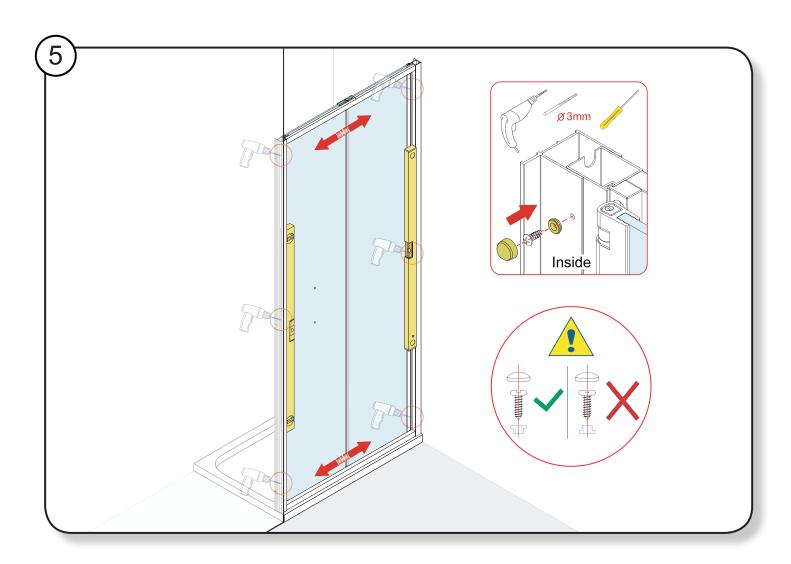


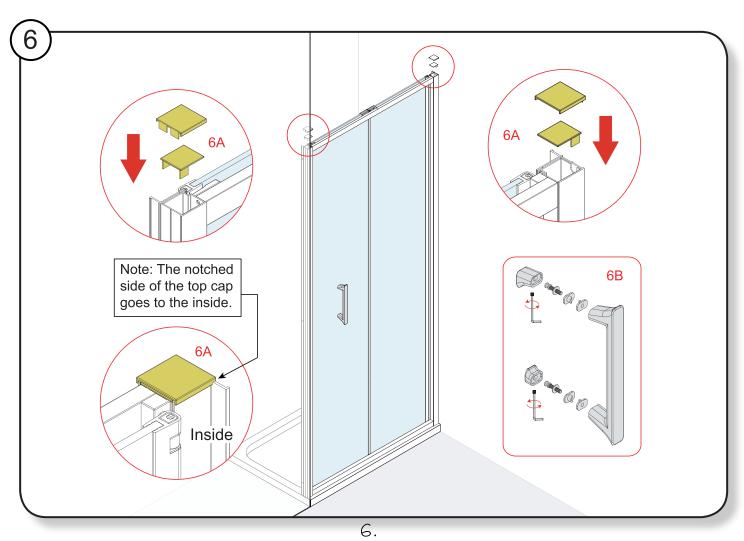


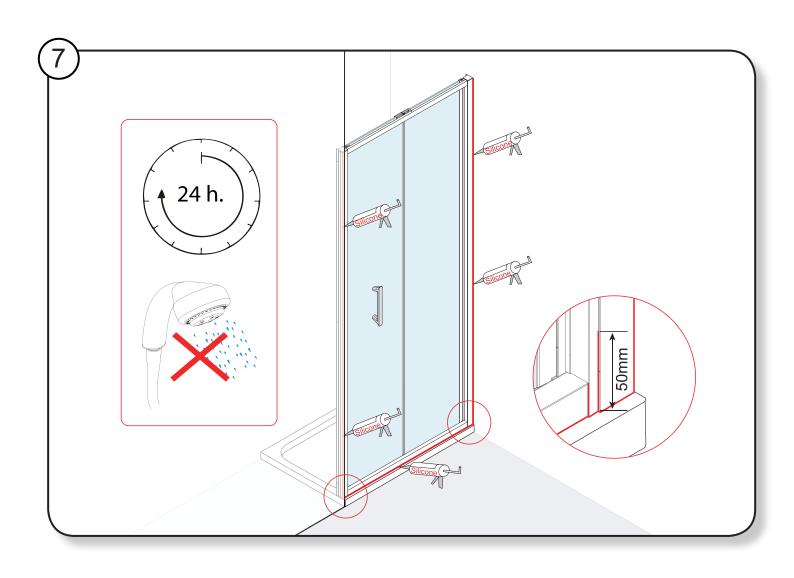


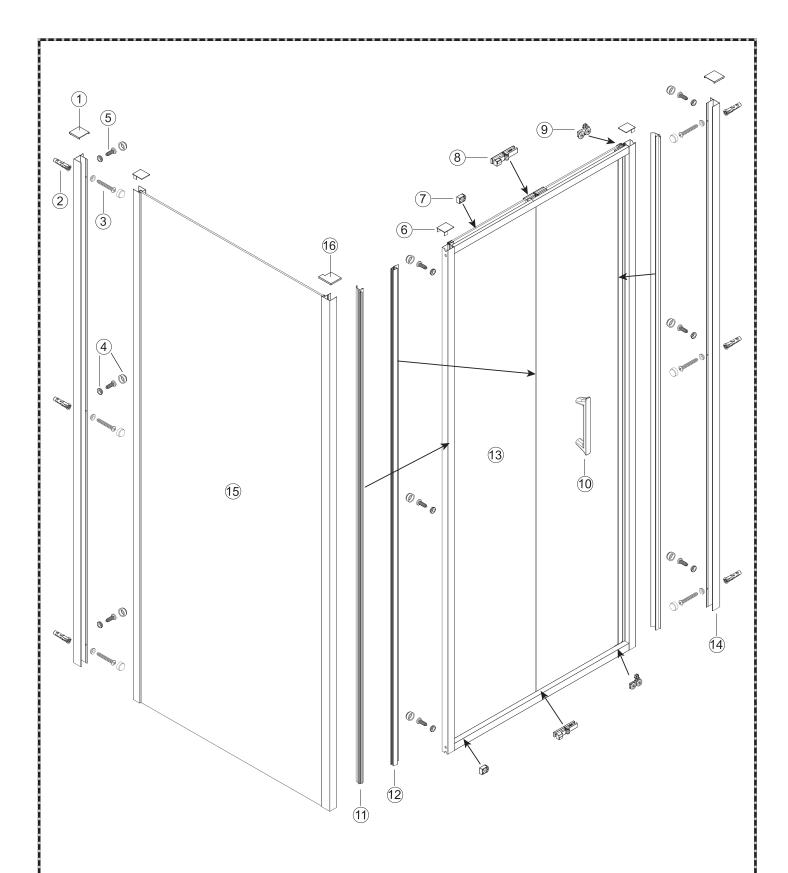



No.	QTY	descriptions	Part number	No.	QTY	descriptions	Part number	No.	QTY	descriptions	Part number
1	1	Wall profile cover cap	SP0SS6026	7	2	Bifold bump stop	SP0SS6037	13)	1	Bifold Door	А
2	6	Wall plug	A03S0090	8	1	Hinge set	SP0SS6042	14)	2	Wall profile	SP0SS6003
3	6	4x30 screw	A03S0089	9	1	Bifold roller set	SP0SS6041	15)	1	Side Panel	В
4	15	Screw cover cap & clip	SP0SS6028	10	1	Handle	SP0SS6029	16)	1	Corner post cover cap	SP0SS6030
(5)	9	4x10 screw	SP0V4110	11)	2	Frame upright seal	SP0SS6019				
6	2	Frame cover cap	SP0SS6027	12	1	Middle upright seal	SP0SS6020				

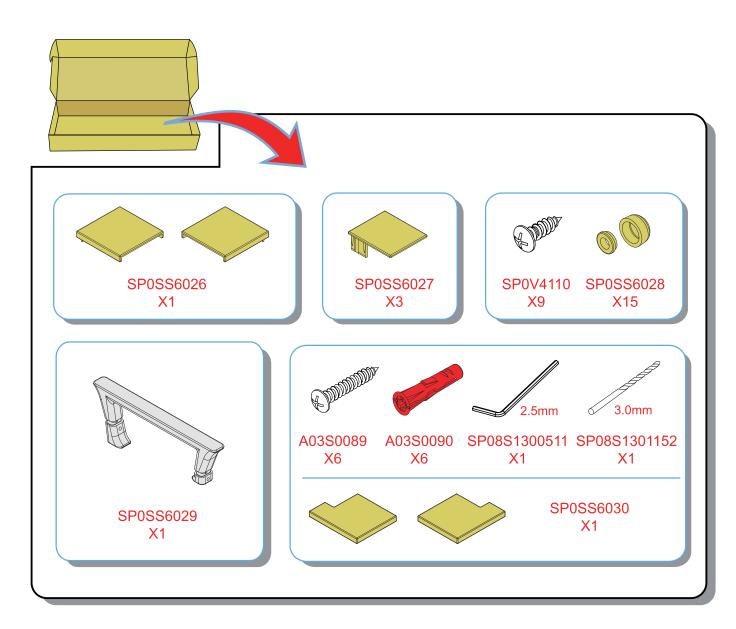


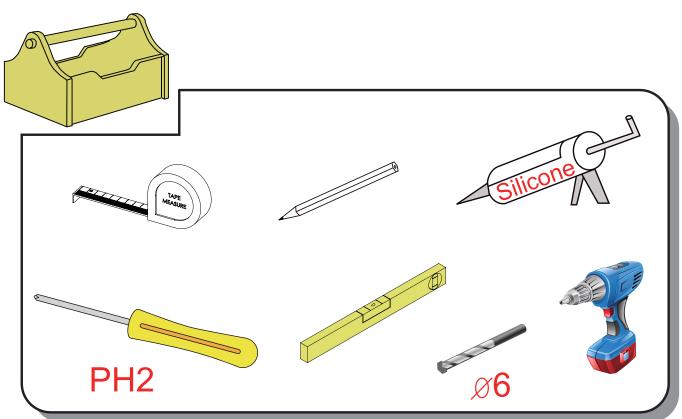


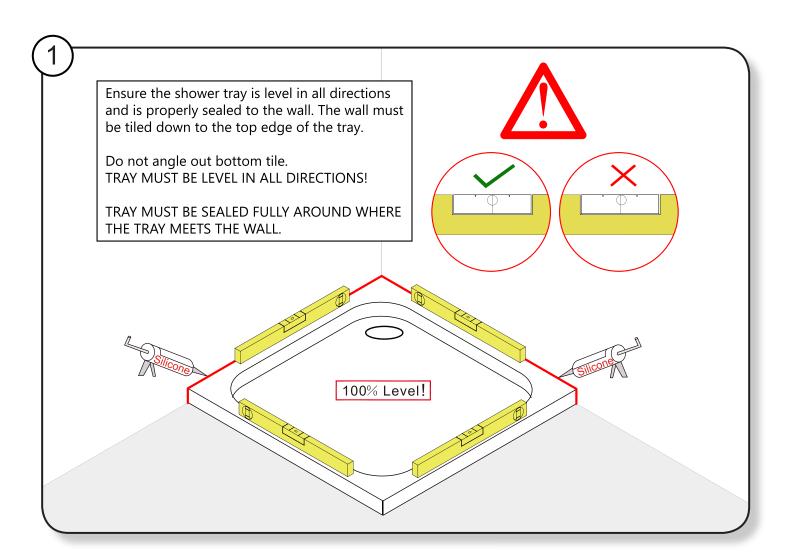


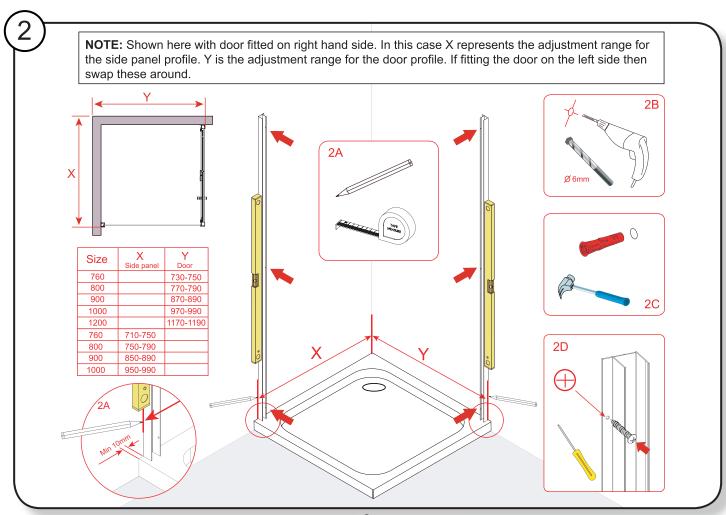


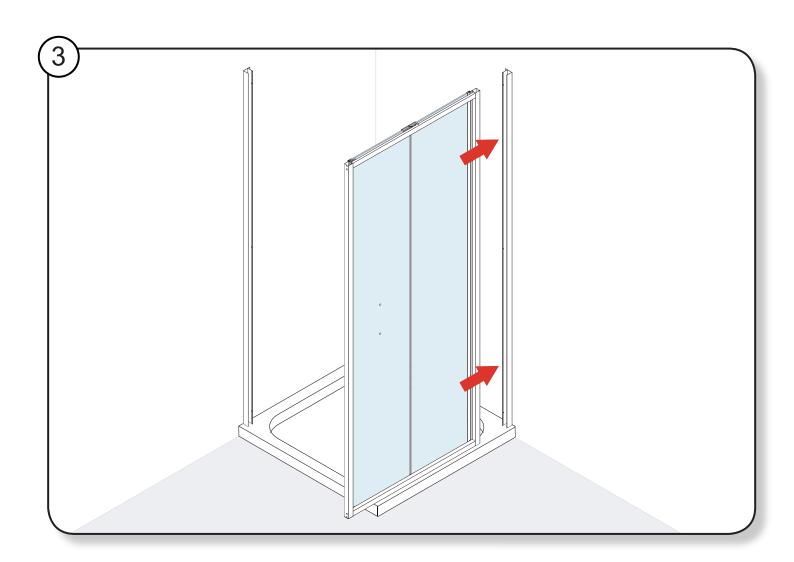

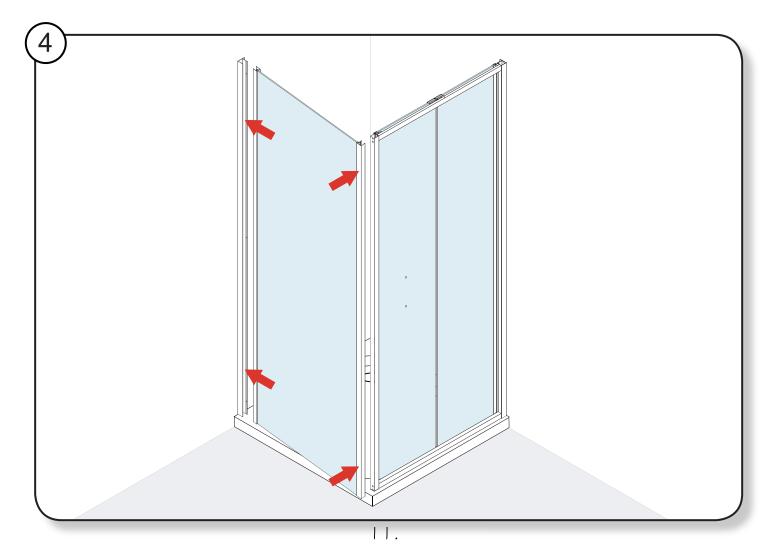

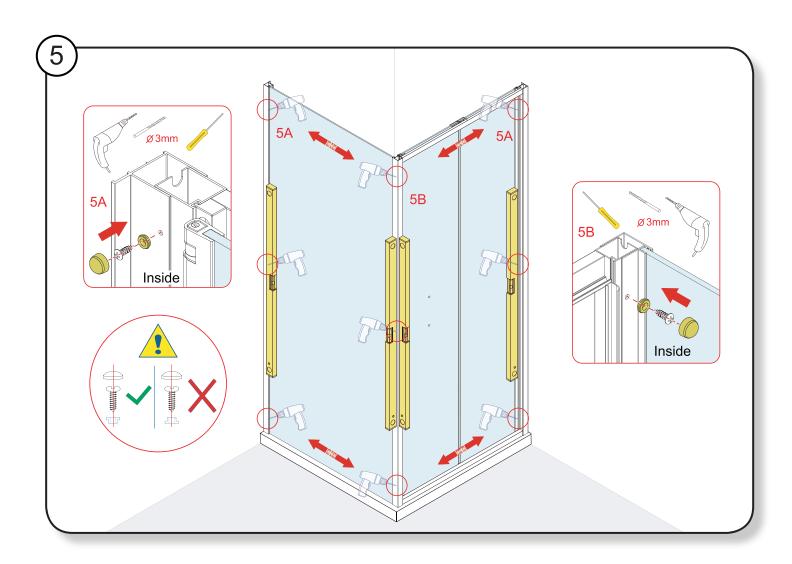

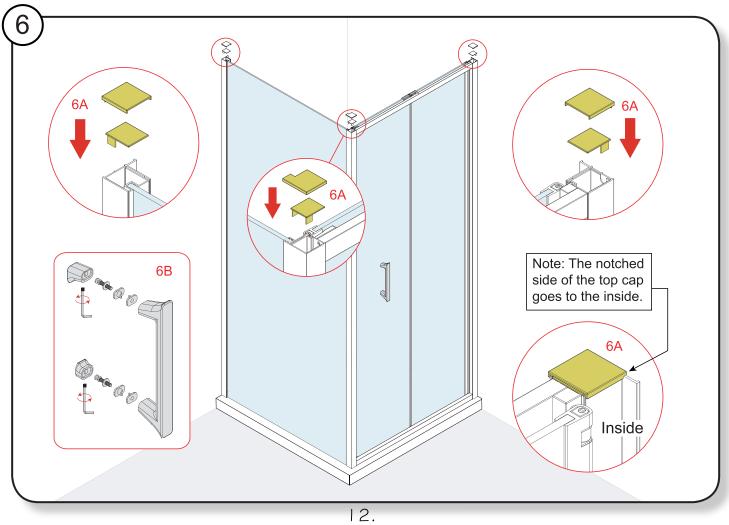

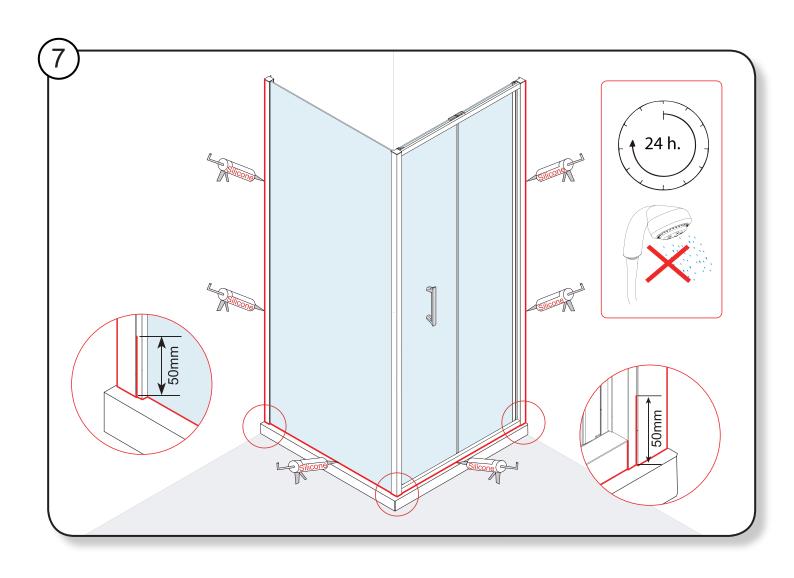

#### **CLEANING**

It is important to clean your Merlyn shower door after every use. Wipe down all the glass and metal parts with a soft cloth. Do not allow lime scale to build up in hard water areas. Ensure that any residual water on the glass is removed after every use.

- · Clean the glass regularly using soapy water.
- · Do not use abrasive products on any surfaces.

Chrome is vulnerable to acid attack and some strong household cleaners including strong disinfectants, denture cleaners, hair dyes, wine making chemicals and photographic chemicals may contain acid. These materials may have a varying effect on the surface from black spots/streaks (which cannot be removed) to pitting the surface. Contact with these materials should be avoided.

### **TROUBLE SHOOTING**

### **Door Not functioning properly**

- 1. Is the tray 100% level? (step1)
- 2. Do the finished tile measurements fall within the adjustment X and Y listed on (step 2)?
- 3. Are the wall profiles plumb ? (step 2)
- 4. Is the frame square and plumb? (step 5)

### **Door Leaking**

- 1. Was the tray adequately sealed before the enclosure was installed? (step 1)
- 2. Is the door sealed correctly ? (step 7)

To download the Declaration of Performance (DOP) for this product please use the link below.

<a href="https://merlynshowering.com/aftersales-support/dop-certs/">https://merlynshowering.com/aftersales-support/dop-certs/</a>

For further information please contact: IRL:0567791555 UK:08081011429